


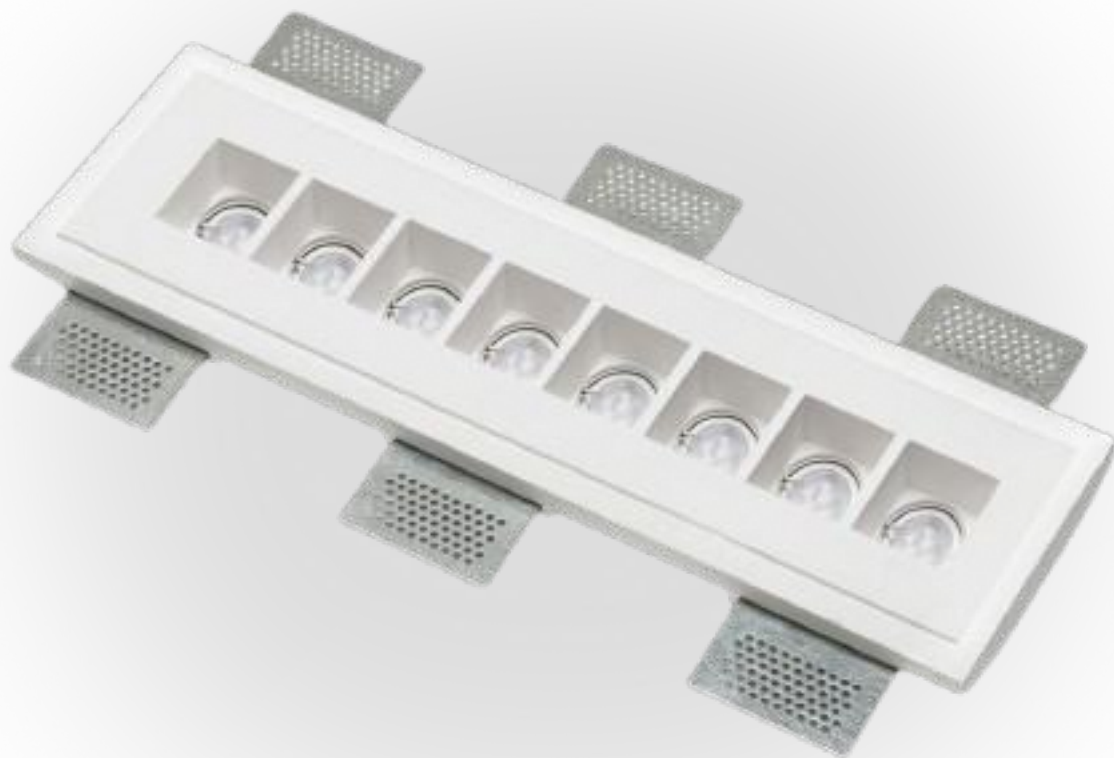


DAMASK BIG

INSTALLATION TYPE:
CEILING - MOUNTED / WALL




			025.584		4191C 4192I 4191F 4192K 4191I 4196D 4191T 4196H 4191K 4196N 4191X 4191Y
	GU10 5W 110-277 V		IP 20		

1

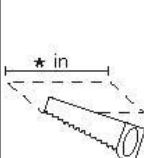

Art.	Size (in)	Depth (in)
4191C	4.7" x 8.3"	3.54"
4191F	4.7" x 16.5"	3.54"
4191I	4.7" x 24.8"	3.54"
4191K	6.5" x 6.5"	3.54"
4191X	6.5" x 6.5"	3.54"
4191Y	6.5" x 6.5"	3.54"
4192I	4.7" x 6.5"	1.97"
4192K	6.5" x 6.5"	1.97"

2

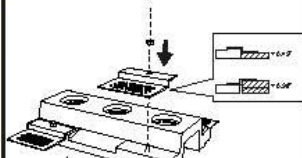


3




ONLY FOR: 4191/4192
ACCESSORIES: 4191T - 00


4

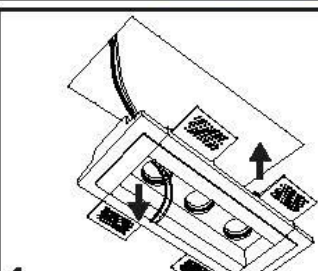


5

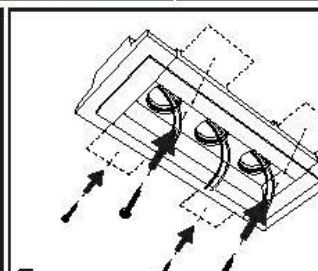


6

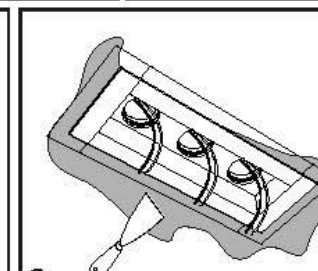


7

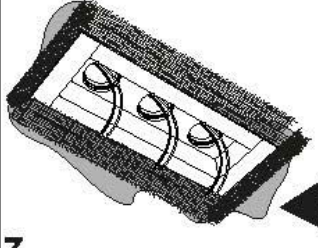


8

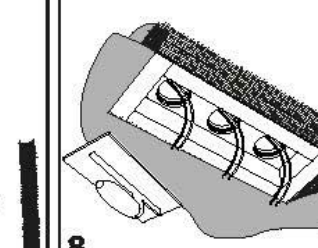

9

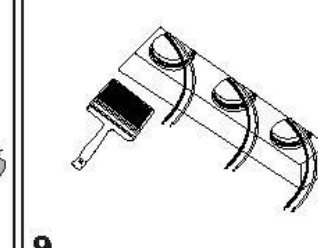


10

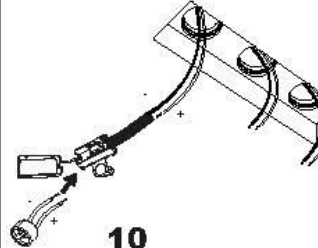


Terminal block is not included. For the installation qualified personnel may be required. (we recommend CABIT V3S 2P / STEAB 5590)

11

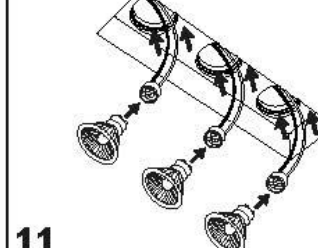

12

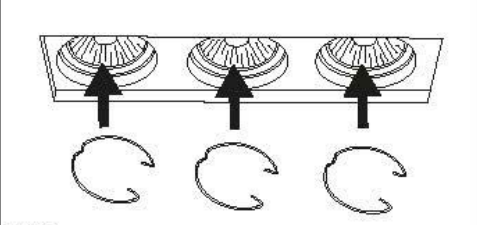



IMPORTANT

To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.

- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, follow the correct colour code for power cables: (N) blue, (L) brown or black and, only for class I equipment, (T) yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightly, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.



= The equipment at the end of its life must be collected separately from other waste.