
## **Assembly Doctor for METROLINE S**

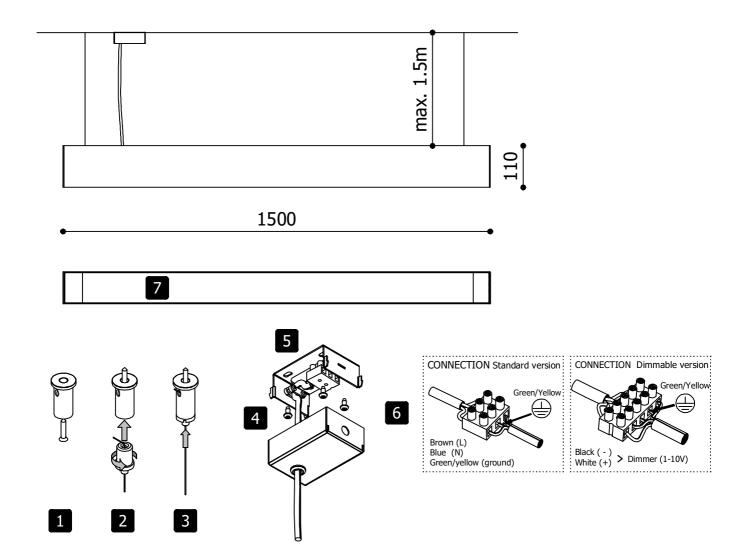

- 1. Screw the gripper body onto the ceiling.
- 2. Turn the adjuster into the gripper body.
- 3. Lock the cables on the preferred height.
- 4. Mount the ceiling bracket with four screws onto the ceiling.
- 5. Adjust the fixture to the preferred height and fasten the strainrelief.
- 6. Connect the power supply and close the ceiling base.
- 7. Carefully remove protective film
- 8. Turn on the power

